

INVOLIGHT

**CM1200
POWER CONFETTI MACHINE**

USER MANUAL

Please read over this manual before operation the machine 

Introduction

Thank you for choosing the 1200W Confetti Machine. You now own a rugged and powerful art- machine. Prior to use, we suggest that you carefully read all of the instructions. By following the suggestions found in this user manual, you can look forward to the reliable and satisfactory performance of your Confetti Machine for years to come.

★Please follow these operation, safety and maintenance instructions tenure a long and safe life for your confetti machine.

Specifications:

Model No.: CM1200

High of Blow: upwards of 10m

Weight:: 36kg

Voltage: 220-250V 50/60Hz

Power: 700W

Size: 62 cm (L)*58 cm (W)*132 cm (H)

Operation

1. Put out the confetti machine from the flight case.
2. Put the machine to the best flatness position.
2. You orientate your shots, Fill with color paper in the tank.
4. Plug power cord into a grounded electrical outlet. If necessary, turn power switch on rear of unit to "ON" position.
5. Put the paper when the machine working for the desired length of time. Its extreme power allows you to project a quantity Confetti up to 10 to 20 m.

Attention:

- ◆There are no user serviceable parts inside.
- ◆Keep the machine and color paper dry.
- ◆Keep fog machine upright.
- ◆The unit is installed at the rated voltage

Cautions

- ◆Risk of electric shock. Disconnect the appliance from the electric supply before removing the cover.
- ◆For adult use only. Confetti machine must be installed out of the reach of children. Never leave the unit running unattended.
- ◆Never add stiffer object in the tank , accord paper only.

