


# INTERNAL PADDING GUIDE

This guide illustrates how to configure the internal padding correctly for a selection of popular DJ controllers.

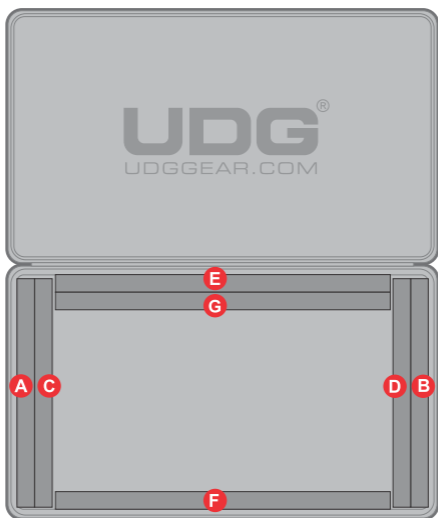

## EQUIPMENT

Pioneer DDJ SX/SX2	Use Side Padding	A E
Pioneer DDJ S1/T1	Use Base Padding	E F
Pioneer XDJ R1	Use Side Padding	A B E F
Pioneer XDJ AERO	Use Base Padding	A B E F G
Pioneer DDJ SR/RR	Use Side Padding	A B C D E F
Denon DJ MC 7000	Use Side Padding	A F
NI Traktor Kontrol S8	Use Side Padding	A B C D
Numark NS 6	Use Padding	A B F
Numark 4Trak	Use Side Padding	A B
Numark N4	Use Padding	A B C D E F
Reloop MIXON 4	Use Padding	A F