 


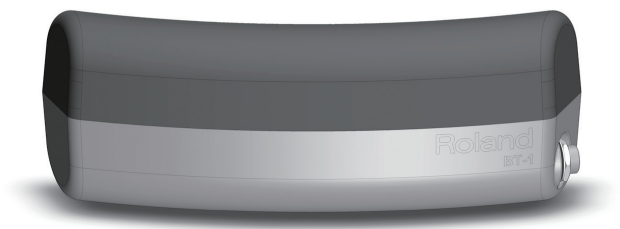

BT-1

Bar Trigger Pad

Owner's Manual



Roland





USING THE UNIT SAFELY







Before using this unit, carefully read the sections entitled "USING THE UNIT SAFELY" and "IMPORTANT NOTES". These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature of your new unit, read Owner's manual should be read in its entirety. This manual should be saved and kept on hand as a convenient reference.

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About  WARNING and  CAUTION Notices

 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

WARNING

Do not disassemble or modify by yourself

Do not open or perform any internal modifications on the unit.



Do not repair or replace parts by yourself

Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.



Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Humid; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness.



WARNING

Precautions regarding placement of this unit on a stand

Be sure to follow the instructions in the Owner's Manual carefully when placing this unit on a stand (p. 5).

If it is not set up properly, you risk creating an unstable situation which could lead to the unit falling and may result in injury.



Don't allow foreign objects or liquids to enter unit

Never allow foreign objects (e.g., flammable objects, coins, wires) or liquids (e.g., water or juice) to enter this product. Doing so may cause short circuits, faulty operation, or other malfunctions.



Adults must provide supervision in places where children are present

When using the unit in locations where children are present, be careful so no mishandling of the unit can take place. An adult should always be on hand to provide supervision and guidance.



Do not drop or subject to strong impact

Protect the unit from strong impact. (Do not drop it!)



CAUTION

Avoid climbing on top of the unit, or placing heavy objects on it

Never climb on top of, nor place heavy objects on the unit.



CAUTION

Keep small items out of the reach of children

To prevent accidental ingestion of the parts listed below, always keep them out of the reach of small children.

- Included Parts
Bolts, Spacers (p. 4)



IMPORTANT NOTES

Placement

- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Do not allow rubber, vinyl, or similar materials to remain on this unit for long periods of time. Such objects can discolor or otherwise harmfully affect the finish.

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- Use a reasonable amount of care when using its output jack. Rough handling can lead to malfunctions.
- When disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- This instrument is designed to minimize the extraneous sounds produced when it's played. However, since sound vibrations can be transmitted through floors and walls to a greater degree than expected, take care not to allow these sounds to become a nuisance others nearby.
- The rubber portion of the striking surface is treated with a preservative to maintain its performance. With the passage of time, this preservative may appear on the surface as a white stain, or reveal how the pads were struck during product testing. This does not affect the performance or functionality of the product, and you may continue using it with confidence.
- Continuous playing may cause dis-coloration of the pad, but this will not affect the Pad's function.

Copyright © 2013 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

Roland, V-Drums, and OCTAPAD are either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.

Getting Started

Main Features

- A bar-type single trigger pad that you can strike with the shoulder of your stick
- Can be attached to the hoop of a V-Drums mesh pad or your acoustic drum
Also supports commercially-available rod type mounts and V-Drums stand pad mounts
- The BT-1 is designed to minimize unintended triggering, and can be used as a pad switch for changing kits or starting/stopping songs
- Compact design that won't obstruct your playing

What's in the Package

- BT-1
- Attachment (for rod type mount)
- Attachment bolt x 2
- Spacer (S) x 1, (L) x 1
- Connection cable
- Owner's manual



Attachment



Attachment bolts

 


Spacer (S)




Spacer (L)

Parts Descriptions

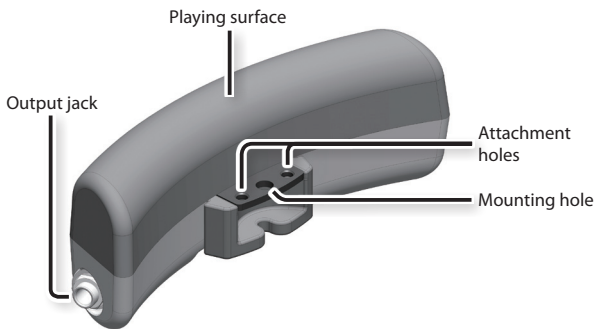

About the spacer

 When shipped from the factory, the spacer (S) is installed and you can use the BT-1 as it is. When attaching the BT-1 to the hoop of the PDX-100 or PD-85, replace the spacer (S) with the spacer (L).

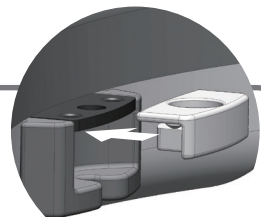

Settings

The BT-1 can be attached to the hoop (tuning bolt) of a V-Drums mesh pad or your acoustic snare or tom.

By using the included attachment, you can also attach it to a commercially-available stand (rod type mount) or to the pad mount of a V-Drums stand.

Attaching the BT-1 to a Drum Hoop

 
NOTE

When the BT-1 is attached on the hoop of an acoustic drum or V-Drums pad, striking the BT-1 will cause the drum it is mounted on to sound. If this presents a problem, the BT-1 can be mounted on a stand (p. 6).


- * Depending on the shape of the hoop, it might not be possible to attach the BT-1 correctly (p. 12).
- * The BT-1 cannot be attached to the hoop of a bass drum.
- * The BT-1 cannot be attached to the PDX-8 or PDX-6.
- * In order to attach the BT-1 to a PDX-100 or PD-85, you must first install the spacer (L).

1. Remove the tuning bolt from the location where you want to attach the BT-1.


- * If the head is strongly tensioned, slightly loosen the entire head before you proceed.

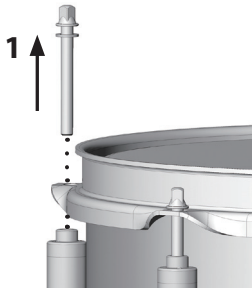

3. Attach the tuning bolt.

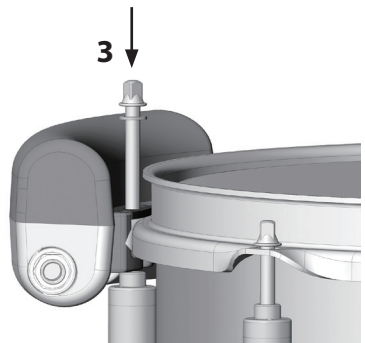 

 2. Lay the mounting hole of the BT-1 over the bolt hole of the hoop.

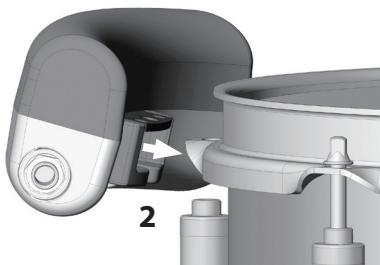

4. Adjust the tension of the head.

- * Strikes on the BT-1 may affect the tension of the head.

Attaching the BT-1 to a Stand

 
 
In order to attach the BT-1 to a stand (rod type mount), you must first install the included attachment on the BT-1.

Installing the attachment

1. Install the attachment on the BT-1 as shown in the illustration.

Use the included attachment bolts to fasten the attachment securely.


- * Remove the spacer.
- * Use your own drum key to tighten the bolts.

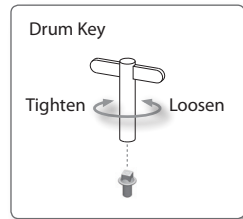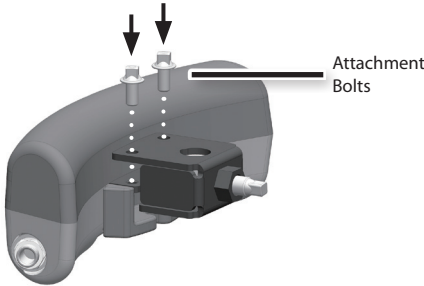

Attaching the BT-1 to a stand

1. Attach the BT-1 to the rod of the stand, and tighten the stand attachment bolt.

 - * When attaching the BT-1 to the stand, be sure to tighten the stand attachment bolt securely. If any of them remain loose, the pad could fall off.

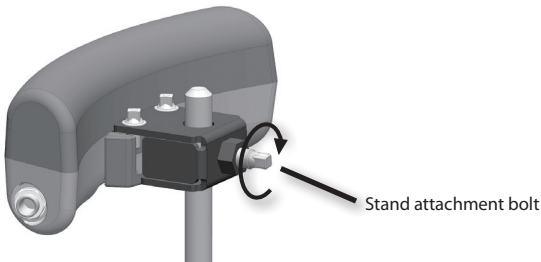

MEMO

When attaching the BT-1 to a commercially available rod type mount, check the dimensions of the rod. Depending on the dimensions of the rod, it may not be possible to attach the pad to the rod.

Acceptable rod diameters: 8.0–12.5 mm (3/8–1/2 inch)

 
Connecting to a Drum Sound Module

Use the included cable to connect the BT-1 to your drum sound module.

- * To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.

1. Use the included cable to connect the BT-1's output jack to a trigger input of your drum sound module.

- * You must use a stereo cable. Operation will not be correct if any other cable is used.
- * When connecting the BT-1 to a TD-15, TD-11, TD-9, or TD-4, you can also use the cable included with the drum sound module.

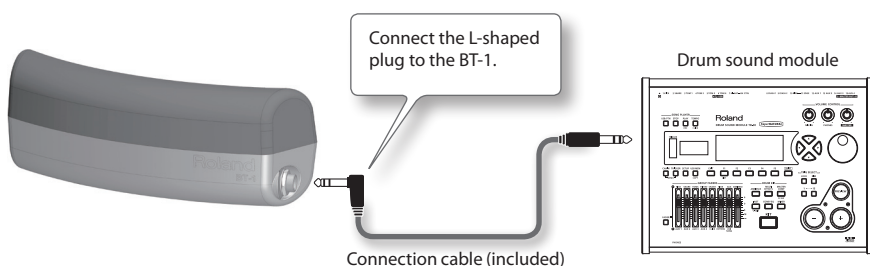

2. Make the trigger parameter settings for the drum sound module.

For details on parameter values recommended for each sound module, refer to p. 8.

3. Strike the BT-1 and verify that it is operating correctly.

MEMO

 
- The BT-1 is a single trigger pad. It cannot distinguish strikes on its head and rim.
- With some drum sound modules, the BT-1 will function as the rim trigger of a pad. In this case, we recommend that no sound or control function (e.g., pad pattern) be assigned to the "head" of the input the BT-1 is connected to.

Trigger Parameter Settings for the Drum Sound Module

In order for the BT-1 to operate correctly, you must specify the optimal trigger parameter values on your drum sound module.

- * For details on how to make settings, refer to the owner's manual of your drum sound module.
- * You may need to adjust the trigger parameters depending on how you've attached the BT-1 and the location at which you've installed it.

TD-30

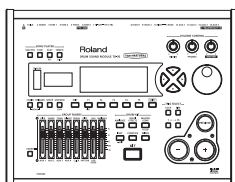

Trig Type	BT1
XTALK	20-40 * When using a BT-1 on a V-Drums pad, set this XTALK parameter for that V-Drums pad.

- * The BT-1 will operate only as the head trigger.
- * If "BT1" does not appear as a Trig Type choice, update your system program.

TD-15, TD-11



Pad Type	BT-1
Xtalk Cancel	20-40 * When using a BT-1 on a V-Drums pad, set this Xtalk Cancel parameter for that V-Drums pad.

- * The BT-1 will operate only as the head trigger.
- * The "KIK" and "RDB" trigger inputs are not supported.
- * If "BT-1" does not appear as a Pad Type choice, update your system program.

Updating your system program

TD-30, TD-15, TD-11, Octapad SPD-30, SPD-SX

 
On these models, "BT-1" will appear as a choice for Trig Type (or Pad Type) if you update the system program of your unit.

For details on how to update, refer to the following URL.

<http://www.roland.com/support/>

Trigger Parameter Settings for the Drum Sound Module


Octapad SPD-30

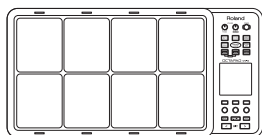

Pad Type	BT-1
X-Talk Cancel Rate	20–40 * When using a BT-1 on a V-Drums pad, set this X-Talk Cancel Rate parameter for that V-Drums pad.

- * The BT-1 will operate only as the head trigger.
- * If “BT-1” does not appear as a Pad Type choice, update your system program (p. 8).

 
SPD-SX

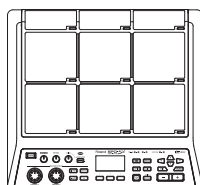

INPUT MODE	HEAD&RIM
TRIG TYPE	BT-1
XTALK CANCEL	20–40 * When using a BT-1 on a V-Drums pad, set this XTALK CANCEL parameter for that V-Drums pad.

- * The BT-1 will operate only as the head trigger.
- * The BT-1 will not operate correctly if INPUT MODE is set to TRIGx2.
- * If “BT-1” does not appear as a TRIG TYPE choice, update your system program (p. 8).

 TD-20X, TD-20, TDW-20, TD-12

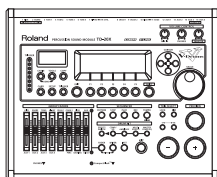


Trig Type	PAD1
Sensitivity	12
XTALK CANCEL	25
MOUNT TYPE	PAD
XTALK CANCEL	20–60 * When using a BT-1 on a V-Drums pad, set this XTALK CANCEL parameter for that V-Drums pad.

- * The BT-1 will operate as the rim trigger of the pad. No sound or control function (e.g., pad pattern) should be assigned to the “head” of the input the BT-1 is connected to.

Trigger Parameter Settings for the Drum Sound Module

 TD-9




Trig Type	PD8
Sensitivity	12
Threshold	8
Scan Time	1.6
Retrig Cancel	4
Mask Time	8
XTalk Cancel	25
Rim Gain	1.0

XTalk Cancel	20–40 * When using a BT-1 on a V-Drums pad, set this XTalk Cancel parameter for that V-Drums pad.
--------------	--

- * The “KIK” and “RDB” trigger inputs are not supported.
- * The BT-1 will operate as the rim trigger of the pad. No sound or control function (e.g., pad pattern) should be assigned to the “head” of the input the BT-1 is connected to.

 TD-4



Pad Type	PD-8
Sensitivity	12
Threshold	8
Scan Time	1.6 ms
Retrig Cancel	4
Mask Time	8 ms
Xtalk Cancel	25 %
Rim Gain	1.0

XTalk Cancel	20–40 % * When using a BT-1 on a V-Drums pad, set this Xtalk Cancel parameter for that V-Drums pad.
--------------	--

- * The “KIK”, “T1”, “T2”, and “T3” trigger inputs are not supported.
- * The BT-1 will operate as the rim trigger of the pad. No sound or control function (e.g., pad pattern) should be assigned to the “head” of the input the BT-1 is connected to.


Troubleshooting

If the BT-1 does not operate as you expect, please check the following points first. If you are still unable to resolve the problem, contact your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.

Problem	Check / Action
No sound	Check the connections. (p. 7)
	Firmly insert the plug of the connection cable all the way into the jack.
	Use a stereo cable. (p. 7)
	Adjust the volume to an appropriate level.
	Check the instrument that's assigned to the head (or rim) trigger.
	Check the drum sound module's trigger indicator to confirm that the drum sound module is receiving the trigger signals. On some drum sound modules, the instrument might not sound if you've assigned a control function to the pad. For details, refer to the owner's manual of your drum sound module.
The sound of another pad is also heard when you strike the BT-1	When the BT-1 is attached to the hoop of a V-Drums pad, striking the BT-1 will cause that pad to sound. If this presents a problem, it can be mounted on an optional stand.
	Adjust the crosstalk cancel setting of your drum sound module.
	Reattach the BT-1 at a different location.
Two or more notes are sounded when you strike once	Fasten the BT-1 firmly to the hoop or stand.
	Fasten the attachment firmly. Increase the retrigger cancel setting on your drum sound module. If this has no effect, increase the mask time setting.
The rim sound is heard instead of the head sound	When the BT-1 is connected to some drum sound modules, the head sound will not be triggered. The BT-1 will operate only as a rim trigger. This is not a malfunction.
The BT-1 is triggered when you strike a different pad or drum	Use a stereo cable. (p. 7)
	If you're using a drum sound module with which the BT-1 operates as a rim trigger, do not assign an instrument or control function to the head of the trigger input the BT-1 is connected to. (p. 8)

Main Specifications

 Roland BT-1: Bar Trigger Pad

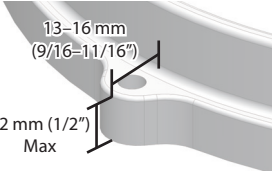Trigger	1
Connector	OUTPUT Jack (Stereo 1/4" phone type)
Dimensions	170 (W) x 53 (D) x 60 (H) mm 6-3/4 (W) x 2-1/8 (D) x 2-3/8 (H) inches
Weight	300 g 11 oz
Accessories	Owner's manual, Attachment, Attachment bolt, Spacer, Connection cable (stereo)
Supported V-Drums pads	PD-128S, PD-128, PD-108, PD-125, PD-105, PDX-100, PD-85
Acceptable hoop size	 <p>13-16 mm (9/16-1 1/16")</p> <p>12 mm (1/2") Max</p> <p>* Depending on the shape of the hoop, it might not be possible to attach the BT-1 correctly.</p>
Acceptable rod diameters	8.0-12.5 mm 3/8-1/2 inch
Options (sold separately)	Pad Mount (MDH series)

* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

For EU Countries



- UK** This symbol indicates that in EU countries, this product must be collected separately from household waste, as defined in each region. Products bearing this symbol must not be discarded together with household waste.
- DE** Dieses Symbol bedeutet, dass dieses Produkt in EU-Ländern getrennt vom Hausmüll gesammelt werden muss gemäß den regionalen Bestimmungen. Mit diesem Symbol gekennzeichnete Produkte dürfen nicht zusammen mit dem Hausmüll entsorgt werden.
- FR** Ce symbole indique que dans les pays de l'Union européenne, ce produit doit être collecté séparément des ordures ménagères selon les directives en vigueur dans chacun de ces pays. Les produits portant ce symbole ne doivent pas être mis au rebut avec les ordures ménagères.
- IT** Questo simbolo indica che nei paesi della Comunità europea questo prodotto deve essere smaltito separatamente dai normali rifiuti domestici, secondo la legislazione in vigore in ciascun paese. I prodotti che riportano questo simbolo non devono essere smaltiti insieme ai rifiuti domestici. Ai sensi dell'art. 13 del D.Lgs. 25 luglio 2005 n. 151.
- ES** Este símbolo indica que en los países de la Unión Europea este producto debe recogerse aparte de los residuos domésticos, de acuerdo con este regulado en cada zona. Los productos con este símbolo no se deben depositar con los residuos domésticos.
- PT** Este símbolo indica que nos países da UE, a recolha deste produto deverá ser feita separadamente do lixo doméstico, de acordo com os regulamentos de cada região. Os produtos que apresentem este símbolo não deverão ser eliminados juntamente com o lixo doméstico.
- NL** Dit symbool geeft aan dat in landen van de EU dit product gescheiden van huishoudelijk afval moet worden aangeboden, zoals bepaald per gemeente of regio. Producten die van dit symbool zijn voorzien, mogen niet samen met huishoudelijk afval worden verwijderd.
- DK** Dette symbol angiver, at i EU-lande skal dette produkt opsamlles adskilt fra husholdningsaffald, som defineret i hver enkelt region. Produkter med dette symbol må ikke smides ud sammen med husholdningsaffald.
- NO** Dette symbolet indikerer at produktet må behandles som spesialavfall i EU-land, til, til retningslinjer for den enkelte regionen, og ikke kastes sammen med vanlig husholdningsavfall. Produkter som er merket med dette symbolet, må ikke kastes sammen med vanlig husholdningsavfall.

- SE** Symbolen anger att i EU-länder måste den här produkten kasseras separat från hushållsavfall, i enlighet med varje regions bestämmelser. Produkter med den här symbolen får inte kasseras tillsammans med hushållsavfall.
- FI** Tämä merkintä ilmaisee, että tuote on EU-maissa kerättävä erillään kotitalousjätteisä kunkin alueen voimassa olevien määräysten mukaisesti. Tällä merkinnällä varustettuja tuotteita ei saa hävittää kotitalousjätteiden mukana.
- HU** Ez a szimbólum azt jelenti, hogy az Európai Unióban ezt a terméket a háztartási hulladéktól elkülönítve, az adott régióban érvényes szabályozás szerint kell gyűjteni. Az ezzel a szimbólummal ellátott termékek nem szabad a háztartási hulladékkal közre dobní.
- PL** Symbol oznacza, że zgodnie z regulacjami w odpowiednim regionie, w krajach UE produktu nie należy wyrzucać z odpadami domowymi. Produktów opatrzonych tym symbolem nie można utylizować razem z odpadami domowymi.
- CZ** Tento symbol udává, že v zemích EU musí být tento výrobek sbírán odděleně od domácího odpadu, jak je určeno pro každý region. Výrobky nesoucí tento symbol se nesmí vyhazovat spolu s domácím odpadem.
- SK** Tento symbol vyjadruje, že v krajinách EÚ sa musia zber tohto produktu vykonávať oddelene od domového odpadu, podľa nariadení platných v konkrétnej krajine. Produkty s týmto symbolom sa nesmú vyhazovať spolu s domovým odpadom.
- EE** See sümbol näitab, et EL-i maades tuleb see toode olemprügist eraldi koguda, nii nagu on igas piirkonnas määratletud. Selle sümboliga märgitud tooteid ei tohi ära visata koos olmeprügiga.
- LT** Šis simbolis rodo, kad ES valsts šis produkts turi būti surenkamas atskirai nuo buitinio atliekų, kaip nustatyta kiekviename regione. Šiuo simboliu paženklinami produktai neturi būti išmetami kartu su buitiniems atliekoms.
- LV** Šis simbols norāda, ka ES valstīs šo produktu jāievieca atsevišķi no mājsaimniecības atkritumiem, kā noteikts katrā reģionā. Produkts ar šo simbolu nedrīkst izmest kopā ar mājsaimniecības atkritumiem.
- SI** Ta simbol označuje, da je treba proizvod v državah EU zbirati ločeno od gospodinskih odpadkov, tako kot je določeno v vsaki regiji. Proizvodna s tem znakom ni dovoljeno odlagati skupaj z gospodinskimi odpadki.
- GR** Το σύμβολο αυτό υποδηλώνει ότι στις χώρες της Ε.Ε. το συγκεκριμένο προϊόν πρέπει να συλλέγεται χωριστά από τα υπόλοιπα οικιακά απορρίμματα, σύμφωνα με όσα προβλέπονται σε κάθε περιοχή. Τα προϊόντα που φέρουν το συγκεκριμένο σύμβολο δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα.

For China

有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。
本资料适用于 2007 年 3 月 1 日以后本公司所制造的产品。

环保使用期限



此标志适用于在中国国内销售的电子信息产品，表示环保使用期限的年限。所谓环保使用期限是指在自制造日起的规定期限内，产品中所含的有害物质不致引起环境污染，不会对人身、财产造成严重的不良影响。环保使用期限仅在遵照产品使用说明书，正确使用产品的条件下才有效。不当的使用，将会导致有害物质泄漏的危险。

产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
外壳(壳体)	×	○	○	○	○	○
电子部件(印刷电路板等)	×	○	×	○	○	○
附件(电源线、交流适配器等)	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。
因根据现有的技术水平，还没有什么物质能够代替它。

For C.A. US (Proposition 65)

WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

AFRICA

EGYPT

Al Fanny Trading Office
9, EBN Hagar Al Askalany Street,
ARD E1 Golf, Heliopolis,
Cairo 11341, EGYPT
TEL: (022)-417-1828

REUNION

MARCEL FO-YAM Sarl
25 Rue Jules Hermann,
Chaudron - BP79 97 491
Ste Clotilde Cedex,
REUNION ISLAND
TEL: (0262) 218-429

SOUTH AFRICA

Paul Bothner(PTY)Ltd.
Royal Cape Park, Unit 24
Londonderry Road, Ottery 7800
Cape Town, SOUTH AFRICA
TEL: (021) 799 4900

ASIA

CHINA

**Roland Shanghai Electronics
Co.,Ltd.**
5F, No.1500 Pingliang Road
Shanghai 200090, CHINA
TEL: (021) 5580-0800

**Roland Shanghai Electronics
Co.,Ltd. (BEIJING OFFICE)**
3F, Soluxe Fortune Building
63 West Dawang Road, Chaoyang
District, Beijing, CHINA
TEL: (010) 5960-2565

HONG KONG

Tom Lee Music
11/F Silvercord Tower 1
30 Canton Rd
Tsimshatsui, Kowloon,
HONG KONG
TEL: 852-2737-7688

Parsons Music Ltd.

8th Floor, Railway Plaza, 39
Chatham Road South, T.S.T,
Kowloon, HONG KONG
TEL: 852-2333-1863

INDIA

Rivera Digitec (India) Pvt. Ltd.
411, Nirman Kendra Mahalaxmi
Flats Compound Off. Dr. Edwin
Moses Road, Mumbai-400011,
INDIA
TEL: (022) 2493 9051

INDONESIA

PT. Citra Intirama
Ruko Garden Shopping Arcade
Unit 8 CR, Podomoro City
Jk.Letjend. S.Panman Kav.28
Jakarta Barat 11470, INDONESIA
TEL: (021) 5698-5519/5520

KAZAKHSTAN

Alatau Dybystary
141 Abylai-Khan ave, 1st floor,
050000 Almaty, KAZAKHSTAN
TEL: (727) 2725477
FAX: (727) 2720730

KOREA

Cosmos Corporation
1461-9, Seocho-Dong,
Seocho Ku, Seoul, KOREA
TEL: (02) 3486-8855

MALAYSIA/ SINGAPORE

Roland Asia Pacific Sdn. Bhd.
45-1, Block C2, Jalan PJU 1/39,
Dataran Prima, 47301 Petaling
Jaya, Selangor, MALAYSIA
TEL: (03) 7805-3263

PHILIPPINES

G.A. Yupangco & Co. Inc.
339 Gil J. Puyat Avenue
Makati, Metro Manila 1200,
PHILIPPINES
TEL: (02) 899 9801

TAIWAN

**ROLAND TAIWAN ENTERPRISE
CO., LTD.**
9F-5, No. 112 Chung Shan
North Road Sec. 2 Taipei 104,
TAIWAN R.O.C.
TEL: (02) 2561 3339

THAILAND

Theera Music Co., Ltd.
100-108 Soi Verng Nakornkasem,
New Road, Sumpantawong,
Bangkok 10100, THAILAND
TEL: (02) 224-8821

VIET NAM

VIET THUONG CORPORATION
386 CACH MANG THANG TAM ST.
DIST.3, HO CHI MINH CITY, VIET
NAM
TEL: (08) 9316540

OCEANIA

AUSTRALIA/ NEW ZEALAND

**Roland Corporation
Australia Pty.,Ltd.**
38 Campbell Avenue
Dee Why West. NSW 2099,
AUSTRALIA

For Australia
TEL: (02) 9982 8266
For New Zealand
TEL: (09) 3098 715

CENTRAL/LATIN AMERICA

ARGENTINA

Instrumentos Musicales S.A.
Av.Santa Fe 2055
(1123) Buenos Aires, ARGENTINA
TEL: (011) 4508-2700

BARBADOS

A&B Music Supplies LTD
12 Webster Industrial Park Wildey,
St.Michael, BARBADOS
TEL: (246) 430-1100

BRAZIL

Roland Brasil Ltda.
Rua San Jose, 211
Parque Industrial San Jose
Cotia - Sao Paulo - SP, BRAZIL
TEL: (011) 4615 5666

CHILE

Comercial Fancy II S.A.
Rut.: 96.919.420-1
Nataníel Cox #739, 4th Floor
Santiago - Centro, CHILE
TEL: (02) 384-2180

COLOMBIA

Centro Musical Ltda.
Cra 43 B No 25 A 41 Bododegua 9
Medellin, COLOMBIA
TEL: (574) 3812529

COSTA RICA

**JUAN BANSBACH Instrumentos
Musicales**
Ave.1. Calle 11, Apartado 10237,
San Jose, COSTA RICA
TEL: 258-0211

CURACAO

Zeelandia Music Center Inc.
Orionweg 30
Curacao, Netherland Antilles
TEL: (305) 5926866

DOMINICAN REPUBLIC

Instrumentos Fernando Giraldez
Calle Roberto Pastoriza #325
Sanchez Naco
Santo Domingo,
DOMINICAN REPUBLIC
TEL: (809) 683 0305

ECUADOR

Mas Musica
Rumichaca 822 y Zaruma
Guayaquil - ECUADOR
TEL: (593-4) 2302364

EL SALVADOR

OMNI MUSIC
75 Avenida Norte y Final Alameda
Juan Pablo II,
Edificio No.4010 San Salvador,
EL SALVADOR
TEL: 262-0788

GUATEMALA

Casa Instrumental
Calzada Roosevelt 34-01, zona 11
Ciudad de Guatemala,
GUATEMALA
TEL: (502) 599-2888

HONDURAS

Almacen Pajaro AZUL S.A. de C.V.
BO.Paz Barahona
3 Ave.11 Calle S.O
San Pedro Sula, HONDURAS
TEL: (504) 553-2029

MARTINIQUE

Musique & Son
Z.Les Mangle
97232 Le Lamentin,
MARTINIQUE F.W.I.
TEL: 596 596 426860

MEXICO

Casa Veerkamp, s.a. de c.v.
Av. Toluca No. 323, Col. Olivar
de los Padres 01780 Mexico D.F.,
MEXICO
TEL: (55) 5668-6699

NICARAGUA

**Bansbach Instrumentos
Musicales Nicaragua**
Altamira D'Este Calle Principal
de la Farmacia Sta.Avenida
1 Cuadra al Lago.#503
Managua, NICARAGUA
TEL: (505) 277-2557

PANAMA

SUPRO MUNDIAL, S.A.
Boulevard Andrews, Albrook,
Panama City, REP. DE PANAMA
TEL: 315-0101

PARAGUAY

**Distribuidora De Instrumentos
Musicales**
J.E. Olear y ESQ. Manduvira
Asuncion, PARAGUAY
TEL: (595) 21 492147

PERU

**Audionet Distribuciones
Musicales SAC**
Av. 2 de Mayo 562
Miraflores
Lima, PERU
TEL: (511) 447-0691

TRINIDAD

AMR Ltd
Ground Floor
Maritime Plaza
Barataria TRINIDAD W.I.
TEL: (868) 638 6385

URUGUAY

Todo Musica S.A.
Francisco Acuna de Figueroa
1771
C.P.: 11.800
Montevideo, URUGUAY
TEL: (02) 924-2335

VENEZUELA

Instrumentos Musicales

Allegro, C.A.

Avilas industrias edf. Guitarr import
#7 zona Industrial de Turumo
Caracas, VENEZUELA
TEL: (212) 244-1122

EUROPE

BELGIUM/FRANCE/ HOLLAND/ LUXEMBOURG

Roland Central Europe N.V.

Houtstraat 3, B-2260, Oevel
(Westerlo) BELGIUM
TEL: (014) 575811

BOSNIA AND HERZEGOVINA

Mix-AP Music

78000 Banja Luka, Veselina
Maslese 3,
BOSNIA AND HERZEGOVINA
TEL: 65 403 168

CROATIA

ART-CENTAR

Degenova 3,
HR - 10000 Zagreb, CROATIA
TEL: (1) 466 8493

CZECH REP.

CZECH REPUBLIC DISTRIBUTOR s.r.o.

Pod Báni 8
180 00 Praha 8, CZECH REP.
TEL: 266 312 557

DENMARK/ESTONIA/ LATVIA/LITHUANIA

Roland Scandinavia A/S

Skagerrakvej 7 Postbox 880
DK-2100 Copenhagen,
DENMARK
TEL: 39166222

FINLAND

Roland Scandinavia As, Filial Finland

Vanha Nurmijarventie 62
01670 Vantaa, FINLAND
TEL: (0) 9 68 24 020

GERMANY/AUSTRIA

Roland Germany GmbH.

Adam-Opel-Strasse 4, 64569
Nauheim, GERMANY
TEL: 6152 95546-00

GREECE/CYPRUS

STOLLAS S.A.

Music Sound Light

155, New National Road
Patras 26442, GREECE
TEL: 2610 435400

HUNGARY/ROMANIA

Roland East Europe Ltd.

2045. Törökbálint, FSD Park 3. ép.,
Budapest, HUNGARY
TEL: (23) 511 011

IRELAND

Roland Ireland

E2 Calmount Park, Calmount
Avenue, Dublin 12,
Republic of IRELAND
TEL: (01) 4294444

ITALY

Roland Italy S. p. A.

Viale delle Industrie 8,
20020 Aresè, Milano, ITALY
TEL: (02) 937-78300

MACEDONIA

MK MUJIK

Alekso Demnievski-Bauman 9-3,
1400 Veles, MACEDONIA
TEL: 70 264 458

MONTENEGRO

MAX-AP

Przno, Kamenovo bb., 86000
Budva, MONTENEGRO
TEL: 68 050 112

NORWAY

Roland Scandinavia Awd.

Kontor Norge

Lilleakerveien 2 Postboks 95
Lilleaker N-0216 Oslo,
NORWAY
TEL: 2273 0074

POLAND

ROLAND POLSKA SP. Z O.O.

ul. Kty Grodziskie 16B
03-289 Warszawa, POLAND
TEL: (022) 678 9512

PORTUGAL

Roland Systems Group EMEA, S.L.

Branch Office Porto

Edifício Tower Plaza
Rotunda Eng. Edgar Cardoso 23,
4-B
4400-676 Vila Nova de Gaia,
PORTUGAL
TEL: (+351) 22 608 00 60

RUSSIA

Roland Music LLC

Dorozhnaya ul.3,korp.6
117 545 Moscow, RUSSIA
TEL: (495) 981-4967

SERBIA

MUSIC AP

Sutjeska br. 5 XS - 24413 PALIC,
SERBIA
TEL: (0) 24 539 395

SLOVAKIA

DAN Acoustic s.r.o.

Povazská 18.
SK - 940 01 Nové Zámky,
SLOVAKIA
TEL: (035) 6424 330

SPAIN

Roland Systems Group EMEA, S.L.

Paseo García Faria, 33-35
08005 Barcelona, SPAIN
TEL: 93 493 91 00

SWEDEN

Roland Scandinavia A/S

SWEDISH SALES OFFICE

Märbackagatan 31, 4 tr.
SE-123 43 Farsta, SWEDEN
TEL: (0) 8 683 04 30

SWITZERLAND

Roland (Switzerland) AG

Landstrasse 5, Postfach,
CH-4452 Ittingen, SWITZERLAND
TEL: (061) 975-9987

UKRAINE

EURHYTHMICS Ltd.

P.O.Box: 37-a.
Nedecy Str. 30
UA - 89600 Mukachevo, UKRAINE
TEL: (03131) 414-40

UNITED KINGDOM

Roland (U.K.) Ltd.

Atlantic Close, SWANSEA SA7 9FJ,
UNITED KINGDOM
TEL: (01792) 702701

MIDDLE EAST

BAHRAIN

Moon Stores

No.1231&1249 Rumaytha Building
Road 3931,
Manama 339, BAHRAIN
TEL: 17 813 942

IRAN

MOCO INC.

Jadeh Mahksous Karaj (K-9),
Nakhe Zarin Ave.
Jalal Street, Reza Alley No.4
Tehran 1389716791, IRAN
TEL: (021)-44545370-5

ISRAEL

Halilit P. Greenspoon & Sons Ltd.

8 Retzif Ha'alila Hashnia St.
Tel-Aviv-Yafo ISRAEL
TEL: (03) 6823666

JORDAN

MUSIC HOUSE CO. LTD. FREDDY

FOR MUSIC

P. O. Box 922846
Amman 11192, JORDAN
TEL: (06) 5692696

KUWAIT

EASA HUSAIN AL-YOUSIFI & SONS CO.

Al-Yousifi Service Center
P.O.Box 126 (Safat) 13002,
KUWAIT
TEL: 00 965 802929

LEBANON

Chahine S.A.L.

George Zeidan St., Chahine Bldg.,
Achrafieh, P.O.Box: 16-5857 Beirut,
LEBANON
TEL: (01) 20-1441

OMAN

TALENTZ CENTRE L.L.C.

Malatan House No.1
Al Noor Street, Ruwi
SULTANATE OF OMAN
TEL: 2478 3443

QATAR

AL-EMADI TRADING & CONTRACTING CO.

P.O. Box 62, Doha, QATAR
TEL: 4423-554

SAUDI ARABIA

Adawiah Universal Electronics

APL

Behind Pizza Inn
Prince Turkey Street
Adawiah Building,
PO BOX 2154,
Al Khobar 31952,
SAUDI ARABIA
TEL: (03) 8643601

SYRIA

Technical Light & Sound Center

PO Box 13520 Bldg No.49
Khaled Abn Alwalid St.
Damascus, SYRIA
TEL: (011) 223-5384

TURKEY

ZUHAL DISE TICARET A.S.

Galip Dede Cad. No.33
Beyoglu, Istanbul, TURKEY
TEL: (0212) 249 85 10

U.A.E.

Adawiah Universal Electronics

APL

Omar bin alkhattab street, fish
round about, nafeef area, deira,
Dubai, U.A.E.
TEL: (04) 2340442

NORTH AMERICA

CANADA

Roland Canada Ltd.

(Head Office)

5480 Parkwood Way Richmond B.
C, V6V 2M4, CANADA
TEL: (604) 270 6626

Roland Canada Ltd.

(Toronto Office)

170 Admiral Boulevard
Mississauga On L5T 2N6, CANADA
TEL: (905) 362 9707

U. S. A.

Roland Corporation U.S.

5100 S. Eastern Avenue
Los Angeles, CA 90004-2938,
U. S. A.
TEL: (323) 890 3700

MEMO