



Modular  
Headphone  
Assembly  
Instruction

1. Find your right side speaker unit, by identifying the red jack socket.

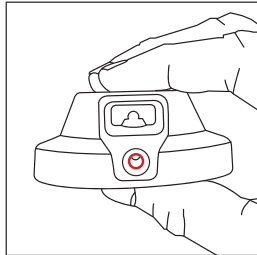


2. Identify the red plug on the headband

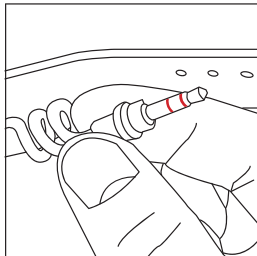

3. Slide the identified speaker unit on to the headband so the two red parts can be connected.

4. Connect the red jack into the red socket of the speaker unit and lock them by rotating the plug 45 degrees.

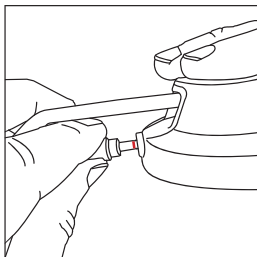

5. Now, repeat the procedure with the all black left side speaker and left side of the headband.

6. Insert the jack with the lock mechanism, into the lower socket of the speaker unit of your choice. Lock the cable by rotating the jack 45 degrees.

7. Attach the earpads to the speaker unit plate, and make sure it is fitted properly to avoid any unintended sound/air leakage.

NB! Please note, that the cut-outs in the over-ear pads are intended to make room for the cable plugs. If placed incorrectly this will affect the acoustic performance of your headphone.