AIAIAI headphones

SWIRL 2.0 Y-model Y-Com (iPhone compatible)

.....

The earphones come with 6 sets of earbuds included for more individual accurate fit and external noise reduction.

The AIAIAI earphones are technically developed in corporation with C4 studio and designed by Kilo design.

AIAIAI has in the development process emphasized on a sturdy design, providing good quality material, superior audio performance and a comfortable fit.

© 2009, AIAIAI inc.

Sound

Full-spectrum sound from the deepest bass to high-frequency tones.

Isolation

The earbuds are designed to deliver external noise reduction for clearer sound at safer volume levels.

Comfort

With a choice of soft-foam or latex, the earphones are designed for in-ear comfort and full grip.

Best Performance

A full bass response depends on the user's ability to properly insert and seal the earphones in the ear canals.

Protecting your hearing

Set the volume low before you insert the earphones into your ears. After the device is within your ear, and there has been created a seal, adjust the volume to a comfortable level. Do not listen at high volume levels, as it can lead to permanent hearing loss. Once a comfortable volume has been selected, do not increase the volume. As you continue to listen, your ears will adapt to the volume level, and if you increase the volume level, you may be causing damage to your ears without feeling discomfort.


Inserting the earphones

Hold your earphone for your right ear in your right hand as shown. For the left ear, use the left hand. Squeeze the foam to make the bud as small as possible.

If the ear buds do not fit your ears correctly, low-bass sound may not be heard. To enjoy better sound quality, adjust the ear buds position to sit on your ears comfortably or push them into the inside of your ears so that they fit your ears snugly. If the ear buds do not fit your ears , try the other earbuds.

After squeezing, the foam bud will expand very slowly at room temperature. However, once inserted into the ear, the body temperature will make it expand quickly and it will become very soft. The expanded, yet soft tip makes an excellent seal in your ear.

Quick Manual

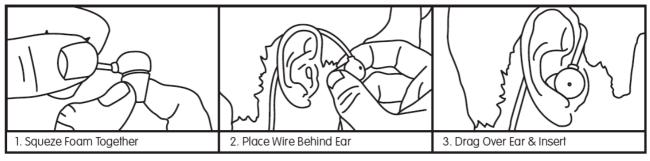

Hold the earphone with the Canal Tip in place for 15-30 seconds until it expands. If the earphone is not comfortable, repeat the above steps, making sure the earphone is seated correctly or else try the latex earbud.

Cleaning the earbuds

Remove the earbuds from the earphones, and wash them with a mild soap.

Precautions

- Listening with earphones at a high volume may affect your hearing.
- Consult a physician or audiologist if you have excessive ear wax, difficulty inserting the earphones, or discomfort after prolonged use. Earwax buildup can reduce the earphone output.

For Y-com model only

The microphone is placed on the right side earphone wire, and has an activation button. When used with an iPhone the button works with a single push to answer incoming calls and hang up.

For using the microphone when using the iPod function on an iPhone and 2009 released iPods, the button functions with a single push to play or stop the music. Push the button two times and the iPod will forward to next song. Push the button three times and the IPod will go back to previous track.


Technical specifications

Driver Unit: 10 mm diameter

Plug: Stereo straight Mini Plug 3.5mm

Impedance: 16 ohms Sensitivity: 105dB/mW Rated power input: 5 mW Maximum power input: 20 mW

Frequency Response Curve

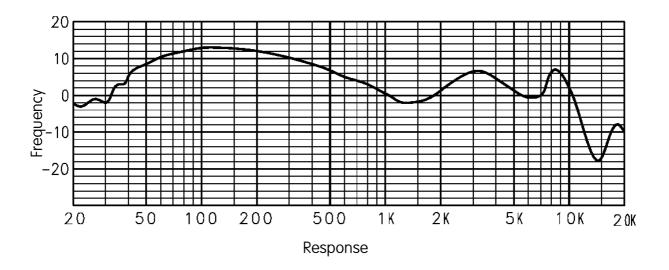

| W | ัด | rr | a | n | t١ |
|-----|----|----|---|---|-----|
| v v | u | | u | | . , |

AIAIAI ApS warrants this product against defects in material or workmanship for a period of 1 year from the date of original purchase from an authorized AIAIAI distributor or reseller. AIAIAI will repair or replace the defective product at its option if returned within the warranty period to our service facility.

This warranty is in lieu of all other warranties, expressed or implied, including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose. Hearing Components shall have no liability of any kind for any direct, indirect, incidental or consequential damages or expenses that arise from the use of this product. If you believe this product is defective within the warranty period, repack the unit and return it postage prepaid to address below.

HQ

AIAIAI ApS
SILJANGADE 4
DK-2300 - COPENHAGEN S
DENMARK
TEL: +45 35343354
info@aiaiai.dk
www.aiaiai.dk